


-Covering the charge cap after it is fully charged.

Your LED Table is now ready for use.

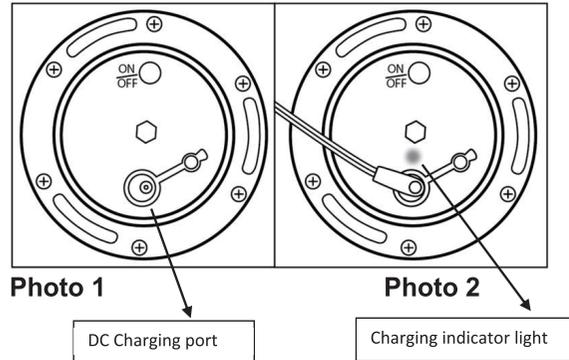

To turn on/off the product by pressing bottom ON/OFF switch or directly pressing ON/OFF button on remote control.

This LED Table has a memory storage function (if the batteries are not fully exhausted) so that when you press the ON/OFF button, the lighting will maintain the same settings.

If the battery is exhausted there will be no memory storage function and it will revert to the default "Smooth" setting.

Mode Selection by Remote Control

Before using the remote control remove the small plastic sheet from the battery cover.



Replace battery:

If the remote control fails to activate the light, replace the battery by:


- Removing the old battery by pressing the tab on the side of the battery cover (check right photo number ①) and then sliding off the cover from the remote control (number ②)
- Taking notice of the "+" and "-" direction of the battery in correct direction;
- Make sure that the new battery is inserted the right way;
- Dispose of the old battery responsibly.





Notice: Each remote control includes a CR2025 battery, if run out power, you need to buy it by yourself.

Milan

1318_80084

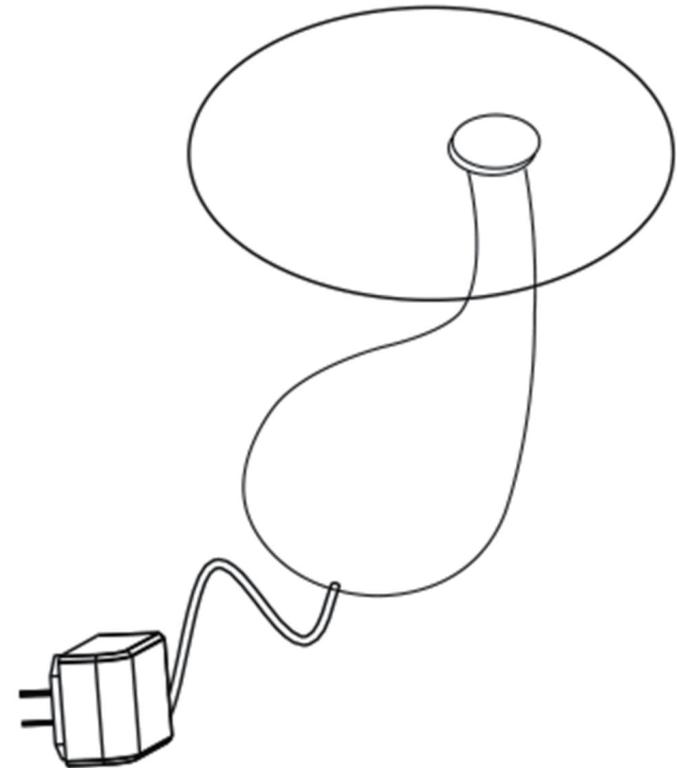

1318_80084

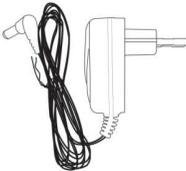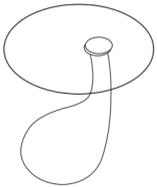A		L85xW52xH6mm	X 1	1~50/50
B		L57.8 x W37.0x H62.0mm Cable: 1.8m	X 1	1~50/50
C		50 X 50 X 53CM	X1	1~50/50

FR : SAV/INFORMATION /VIDEO/CONTACT
 EN: AFTER-SALES SERVICE/INFORMATION/VIDEO/CONTACT
 DE : REPARATUR-SERVICE UND ERSATZTEILE /INFORMATIONEN /VIDEO/KONTAKT
 ES: SERVICIO POST-VENTA/INFORMACIÓN/VIDEO/CONTACTO
 IT: SERVIZIO ASSISTENZA/INFORMAZIONI/VIDEO/CONTATTO
 PT: SERVIÇO PÓS-VENDA/INFORMAÇÕES/VIDEO/CONTATO
 PL: SERWIS TECHNICZNY/INFORMACJE/WIDEO/KONTAKT
 NE: AFTER SALES SERVICE/INFORMATIE/VIDEO/CONTACT
 HE: עם לתקשר/הווידיאו/ מידע/מכירות שירות לאחר

SAV.HABITATETJARDIN.COM

Model

This Manual applies to all LED Cocktail Table

Specification

Our LED Cocktail Table are manufactured to an international standard (IP44) to protect against dust and water. This means that they can be used outdoors, but not near or in pools, provided that they are used in accordance with this Instruction Manual. This product is made of white polyethylene.

- Ambient temperature for operation: -14° C to 35° C
- LEDs: 18 x RGB LEDs
- Battery: Lithium battery (1x3.7V,2000mAH)
- Remote control battery: CR2025 (3V)
- Remote control effective distance: 4-8 meters
- Charging time: 6 to 8 hours
- Operation time: 4 to 8 hours depends on color mode
- Charger: Input: AC100-240V
Output: DC7.5V 0.6A (CE/ROHS approved)

Warning and caution

- These products and their packaging are not toys; please keep out of reach of children.
- The remote control ,Charging plate and charger are not waterproof and must be kept in a dry location at all times and not be used outdoor, not exposed to rain, humidity, any liquid, or heat.
- Only use the attached charger with product to charge.
- Never charge the product in a pool, water or rain; charge in a dry, indoor location.
- Disconnect the charger from outlet when not in use.
- Do not stand ,or jump on this product.
- Do not sit on this product if it is cracked or damaged.
- Keep the product away from chemicals and heat.
- Do not attempt to open the product and its accessories.
- It is recommended that to turn off the product after use, rinsed using clean water and dried using a soft cloth.
- Do not put under direct sunlight when not in use.

Operation

Charging your new Product

Before the product is used charge the battery for 6 to 8 hours by:


- Plug charger into "DC charging port" of charging plate as shown in below Photo 1
- Connecting the charger to the electrical outlet (the charging indicator light shown in photo 2 will light up red to indicate that charging is working);
- Monitoring the charging indicator light (it will turn to green when it is fully charged).

Remplacement de la batterie :

Si la commande ne fonctionne plus, remplacez la batterie en :

- Remplaçant l'ancienne batterie en appuyant sur l'onglet présent sur le côté du couvercle de protection et retirer ce dernier en le faisant glisser (Prêter attention aux signes "+" et "-" pour la position de la batterie)
- Assurez-vous que la nouvelle batterie est insérée dans le bon sens ;
- Débarrassez-vous de l'ancienne batterie de manière convenable et responsable

Note : Chaque télécommande contient une batterie CR2025 ; Si elle ne fonctionne plus, vous devez en racheter une vous-même

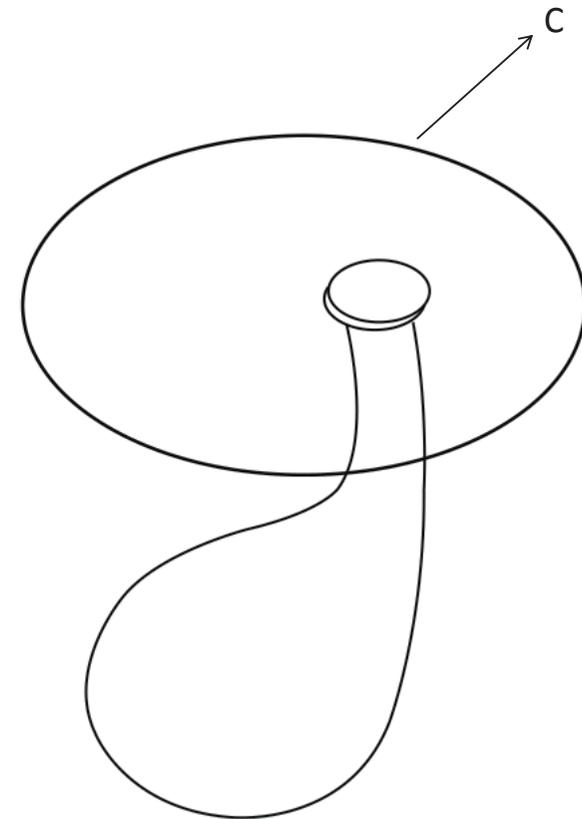

A



B

Modèle

Ce manuel s'applique à la table cocktail LED

Spécificités

Nos tables cocktail LED sont fabriqués en respectant un standard international (IP44) qui assure résistance face à l'eau et à la poussière. Ce qui signifie qu'elles peuvent être utilisées dehors, mais pas à proximité des piscines et ne peuvent être mis en charge à proximité ou dans les piscines. Leur utilisation doit se faire dans le respect total de ce manuel. Ce produit est fabriqué à base de polyéthylène blanc.

Température ambiante de fonctionnement	-14° C to 35°C
LEDs:	18 x RGB LEDs
Batterie :	Batterie au lithium (1x3.7V,2000mAh)
Batterie de télécommande :	CR2025 (3V)
Portée de la télécommande :	4 mètres
Temps de chargement :	6 à 8 heures
Autonomie :	4 à 8 heures
Chargeur :	Entrée : AC100-240V Sortie : DC7.5V 0.6A (CE/ROHS approuvé)

Précautions et mise en garde

Ces produits ainsi que leur packaging ne sont pas des jouets ; veuillez le tenir hors de portée des enfants.

- La télécommande et le chargeur ne sont pas waterproof et doivent être gardés dans un endroit sec. Ne doivent pas être utilisés en extérieur, ne pas être exposés à la pluie, à l'humidité, à un quelconque liquide ou chaleur.
- N'utilisez que le chargeur fourni avec le produit pour recharger votre produit.
- Ne rechargez pas votre produit dans la piscine, sous l'eau ou sous la pluie, rechargez le dans un endroit sec et en intérieur.
- Débranchez le chargeur dès que le produit n'est plus en charge.
- Ne pas se tenir debout ni sauter sur l'appareil.
- Ne pas s'asseoir sur le produit, surtout s'il est cassé ou endommagé.
- Gardez votre produit éloigné des produits chimiques et de la chaleur.
- N'essayez pas d'ouvrir le produit ou ses accessoires.
- Ne pas positionner le produit sous les rayons du soleil quand il n'est pas utilisé.

FR

Fonctionnement

Chargement de votre nouveau Produit

Charger le produit 6 à 8 heures avant utilisation en :

- Insérer le chargeur dans le socle comme illustré en photo 1.
- Connectez le chargeur à une prise électrique (L'indicateur lumineux de couleur rouge visible Photo 2 s'allumera pour montrer que l'appareil et bien en charge)
- Tenir le chargeur hors de portée des enfants.
- Débranchez toujours le chargeur après utilisation
- Ne jamais essayer d'ouvrir le chargeur
- La lumière sera rouge durant le chargement et deviendra verte une fois le produit chargé entièrement.

Votre table cocktail LED est prêt à utilisation

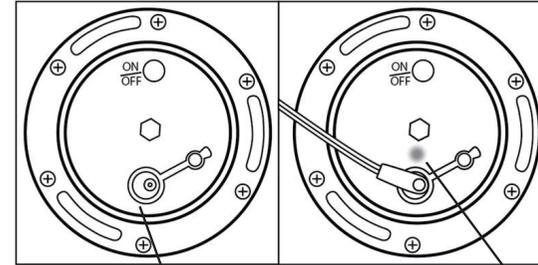


Photo 1

Port de chargement

Photo 2

Indicateur lumineux

Pour allumer ou éteindre votre produit, appuyez sur le bouton ON/OFF ou appuyez sur la télécommande sur le bouton ON/OFF.

Ce siège cubique LED a une fonction de mémoire stockage (ceci dans le cas où la batterie n'est pas complètement faible) si bien que lorsque vous pressez le bouton ON/OFF, la lumière correspond au dernier réglage effectué.

Si la batterie est faible, le dernier réglage ne s'enregistre pas et la lumière se remet en réglage par défaut « Smooth ».

Utilisation de la télécommande

Avant d'utiliser la télécommande, veuillez retirer la petite feuille de plastique sous le couvercle de protection de la batterie.

